

# U EPOXY IT™

## EPOXY CLEAR SYSTEM

### STEP 1: PREP


1. Run Concrete DNA™ Satellite 30-Grit Pad under a low-speed floor buffer in conjunction with Super Blue. You want to floor to have a chalkboard look to it.

**WHEN USING WATER TO PREP A FLOOR ALLOW A MINIMUM DRY TIME OF 12-24 HOURS BEFORE APPLYING THE BASECOAT.**



### STEP 2:

1. After the floor has sufficiently dried apply a coat of Epoxy M.V.B.
  - a. Squeegee onto the floor using a 1/8<sup>th</sup> notched squeegee
    - i. Walk through product with spiked shoes
  - b. Use a 3/8<sup>th</sup> Nap roller to back-roll the product.
  - c. Allow to dry until tack free and within the recoat window. If the product has been down for more than 24-Hours it will need to be screened before coating.

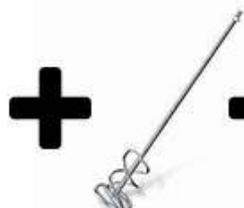

### STEP 3:

1. Apply a coat of Epoxy Flow 100
  - a. Squeegee onto the floor using a 1/8<sup>th</sup> Notched squeegee
    - i. Walk through the product with spiked shoes
  - b. Use a 3/8<sup>th</sup> Nap Roller to back-roll the product
    - i. Ez-Grip can be added to this coat for additional traction

